



MAX3804 Evaluation Kit

Evaluates: MAX3804

General Description

The MAX3804 DC-coupled evaluation kit (EV kit) simplifies evaluation of the MAX3804 12.5Gbps settable equalizer. The EV kit enables full testing of the device functions including all equalization settings. SMA connectors with 50Ω controlled-impedance transmission lines to the MAX3804 are provided for all CML input and output ports.

Ordering Information

PART	TYPE
MAX3804EVKIT#	EV Kit

#Denotes RoHS compliant.

Component List

DESIGNATION	QTY	DESCRIPTION
C1–C5	5	0.1μF ±10% ceramic capacitors (0402)
C6	1	0.1μF ±10% ceramic capacitor (0603)
C7–C10	4	33μF ±10% tantalum capacitors (case-B)
J1–J4	4	SMA connectors, tab contact
JP1, JP2, JP3	3	2-pin headers, 0.1in centers
JPEQ1, JPEQ2, JPEQ3	3	3-pin headers, 0.1in centers
R3	1	10kΩ resistor (0402)
R4	1	12kΩ resistor (0402)
R5	1	8kΩ resistor (0402)
GND, VCC, VCC1, VCC2, VEE, TP4, TP5	7	Test points
U1	1	12.5Gbps settable receive equalizer (16 TQFN) Maxim MAX3804ETE#G16
None	5	Shunts
None	1	PCB: MAX3804 EV kit board#
None	1	MAX3804 data sheet

Component Suppliers

SUPPLIER	PHONE	WEBSITE
AVX	803-946-0238	www.avxcorp.com
Coilcraft, Inc.	847-639-6400	www.coilcraft.com
Murata Electronics North America, Inc.	770-436-1300	www.murata-northamerica.com
Zetex Semiconductors	631-543-7100	www.zetex.com

Features

- ◆ DC-Coupled EV Kit
- ◆ SMA Connectors for All High-Speed Inputs and Outputs
- ◆ Fully Assembled and Tested

Quick Start

Note: The MAX3804 EV kit is a DC-coupled evaluation board. Care must be taken to ensure that no direct short between the supply voltage and supply ground exists. Use external coupling capacitors on the input and output when AC-coupling is desired. DC-coupled operation with positive VCC supplies normally causes permanent damage to laboratory test equipment (typical oscilloscope, BERT). The MAX3804 EV kit must be operated from a negative VEE supply when DC-coupled to normal laboratory equipment.

- 1) Connect a -3.3V power supply to TP3 (VEE). Connect the power-supply ground to TP2 (GND) and J6 (VCC). Install shunts in JP2 and JP3, and remove shunt from JP1.
- 2) Install shunts across pins 2 and 3 of JPEQ1, JPEQ2, and JPEQ3 for minimal equalization (0, 0, 0). See Table 1 for the relationship between nominal path loss and FR-4 microstrip path length.
- 3) Apply a differential input signal (400mV_{p-p} to 1200mV_{p-p}) between SMA connectors J1 and J2 (SDI+ and SDI-).
- 4) Attach a differential high-speed oscilloscope with a 50Ω input to SMA connectors J3 and J4 (SDO+ and SDO-) to observe the output of the equalizer.

Table 1. Relationship Between Nominal Path Loss and FR-4 Microstrip Path Length

JPEQ3	JPEQ2	JPEQ1	NOMINAL 6-mil FR-4 MICROSTRIP LENGTH (in)
0	0	0	2
0	0	1	6
0	1	0	10
0	1	1	14
1	0	0	18
1	0	1	22
1	1	0	26
1	1	1	30

Note: 0 refers to pins 2 and 3 shunted. 1 refers to pins 1 and 2 shunted.



MAX3804 Evaluation Kit

Adjustment and Control Descriptions (see Quick Start)

COMPONENT	NAME	FUNCTION
JPEQ1	EQ1	Equalizer boost control logic input LSB
JPEQ2	EQ2	Equalizer boost control logic input
JPEQ3	EQ3	Equalizer boost control logic input MSB

Alternative Supply Configurations

AC-Coupled Operation with VCC1 = VCC2 = +1.65V

Connect a +3.3V power supply to J6 (VCC). Connect a +1.65V power supply to TP1 (VCC1) and J5 (VCC2). Connect the power-supply ground to TP2 (GND). Remove shunts JP2 and JP3. Install shunt JP1. Use external AC-coupling for connecting to external laboratory equipment (typical oscilloscope, BERT).

DC-Coupled Operation with Laboratory Equipment

Connect a +1.85V power supply to J6 (VCC). Connect a -1.65V power supply to TP3 (VEE). Connect the power-supply ground to TP2 (GND). Install shunts JP2 and JP3. Remove shunt JP1. With this setup the part can be DC-coupled to external laboratory equipment (typical oscilloscope, BERT).

DC-Coupled Operation with Oscilloscopes and BERTs

The MAX3804 is designed with DC-coupled inputs and outputs, implemented with internal 50Ω terminations to VCC1 (SDI±) and VCC2 (SDO±). Laboratory oscilloscopes and BERTs normally terminate their inputs and outputs with 50Ω to ground. When the MAX3804 VCCs are connected to a positive supply, a DC path exists from the power supply to the ports of the oscilloscope or BERT. This configuration can cause permanent damage to the oscilloscope or BERT.

When the MAX3804 EV kit is being used with normal oscilloscopes or BERTs, either external AC-coupling must be provided or VCC1 and VCC2 must be connected to ground (i.e., using a negative VEE supply). Failure to do so may permanently damage laboratory equipment.

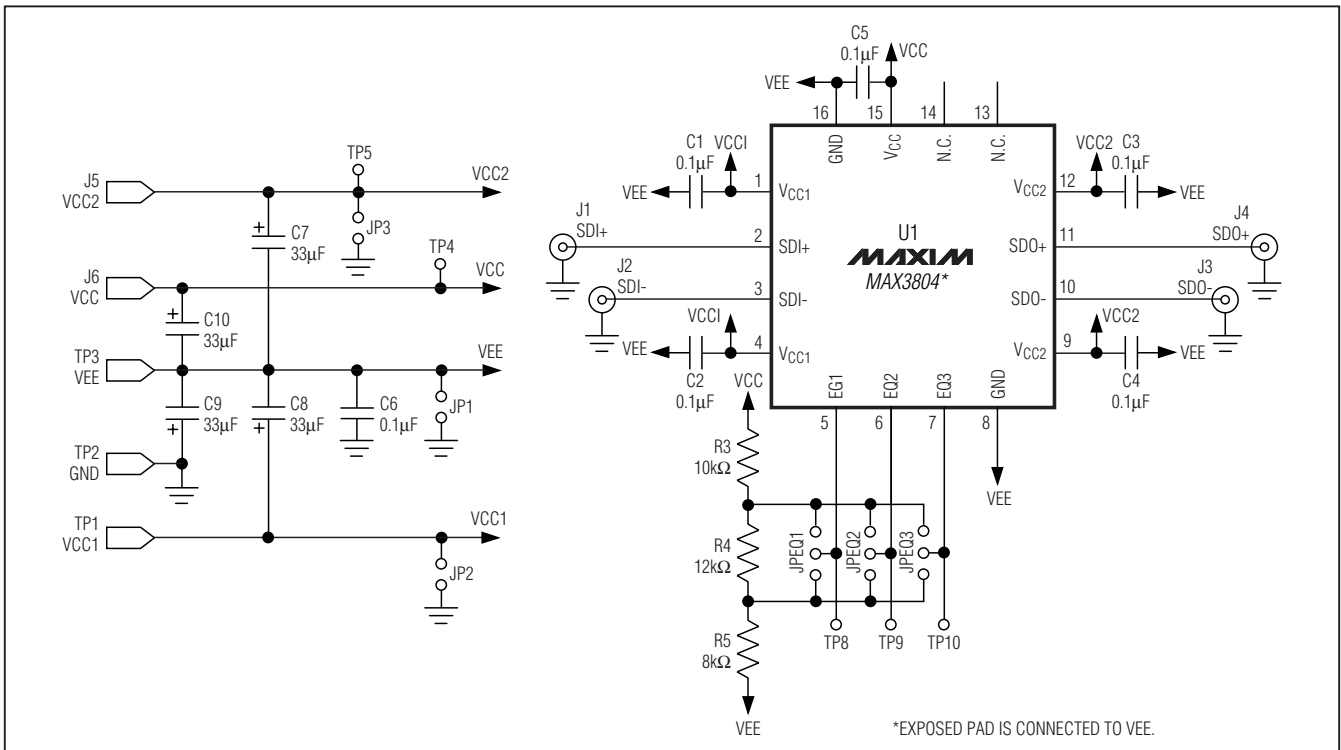


Figure 1. MAX3804 Schematic Diagram

MAX3804 Evaluation Kit

Evaluates: MAX3804

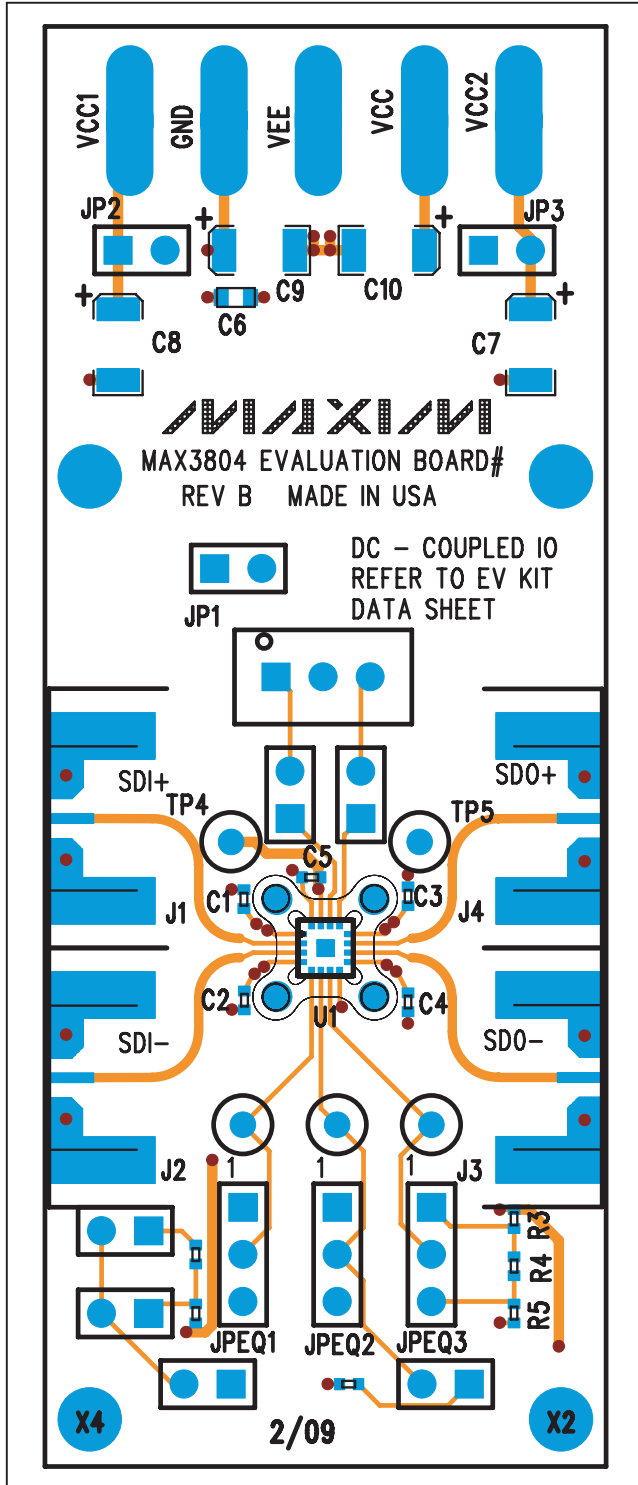


Figure 2. MAX3804 Component Placement Guide

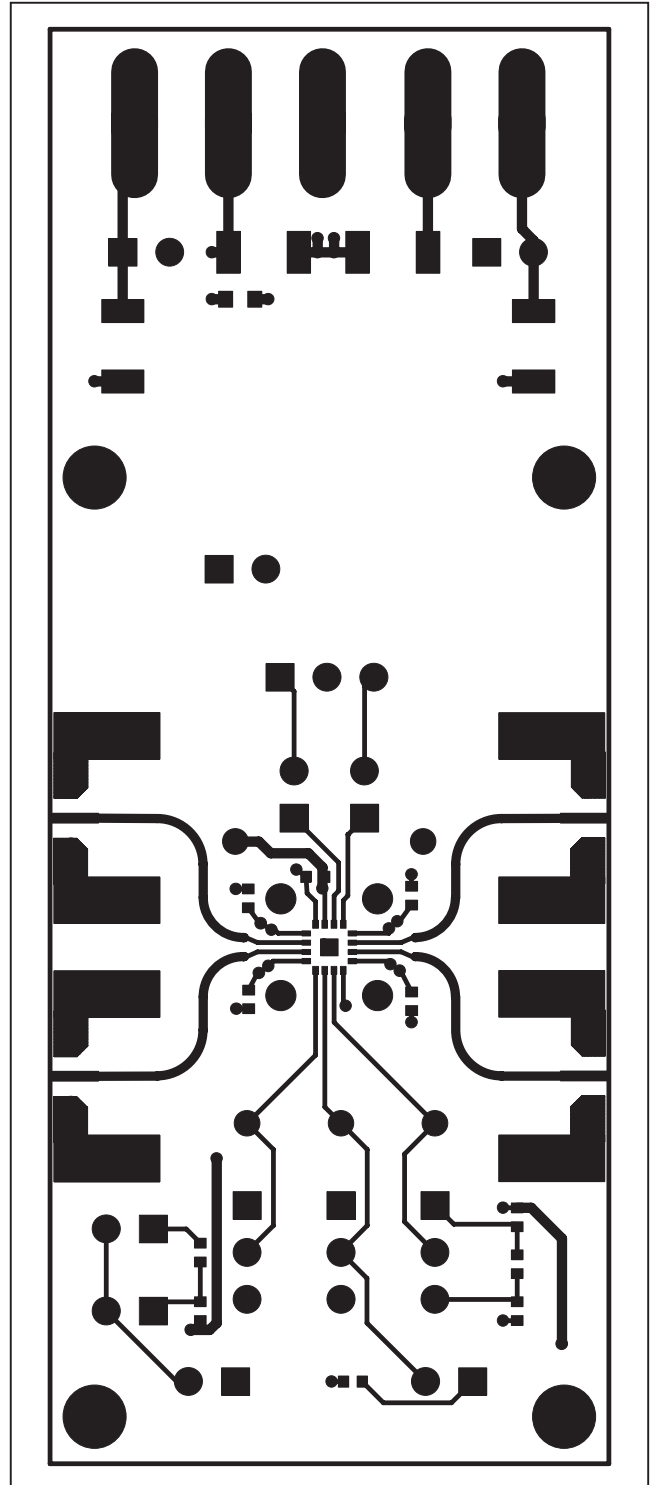


Figure 3. MAX3804 PCB Layout—Component Side

MAX3804 Evaluation Kit

Evaluates: MAX3804

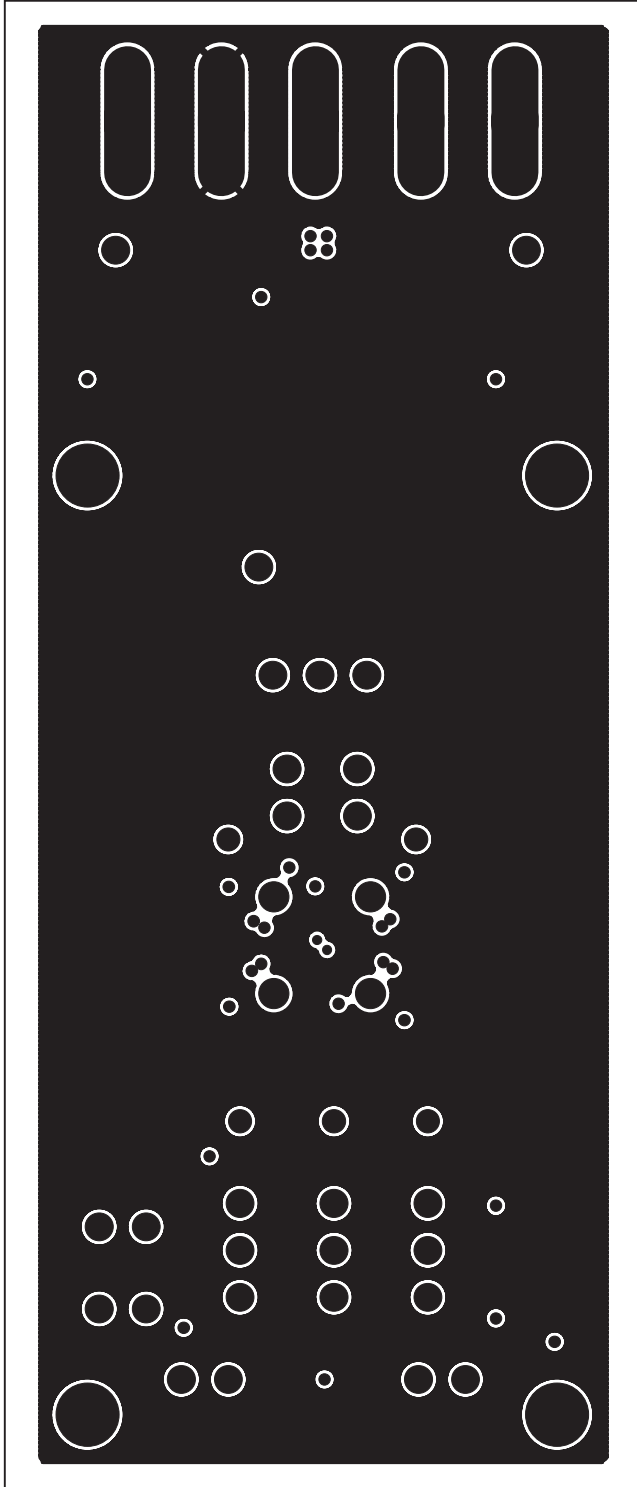


Figure 4. MAX3804 PCB Layout—Ground Plane

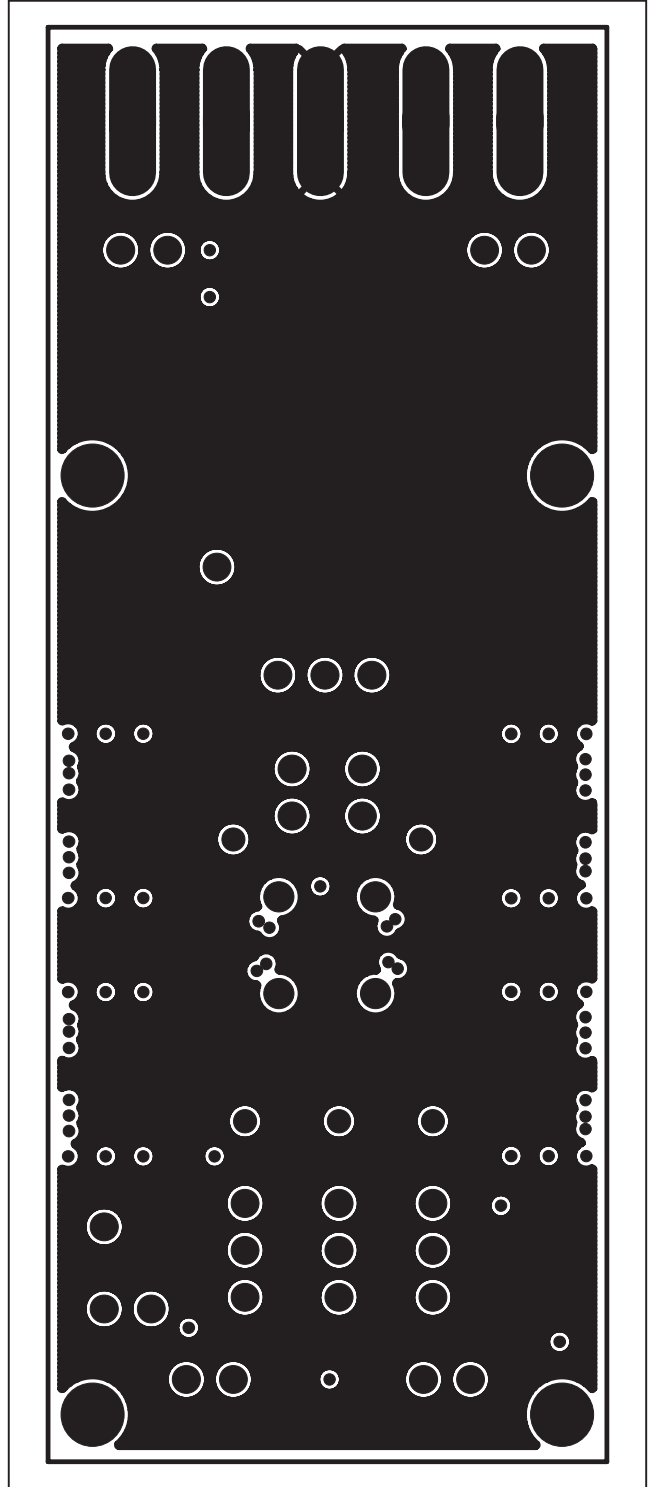


Figure 5. MAX3804 PCB Layout—Power Plane

MAX3804 Evaluation Kit

Evaluates: MAX3804

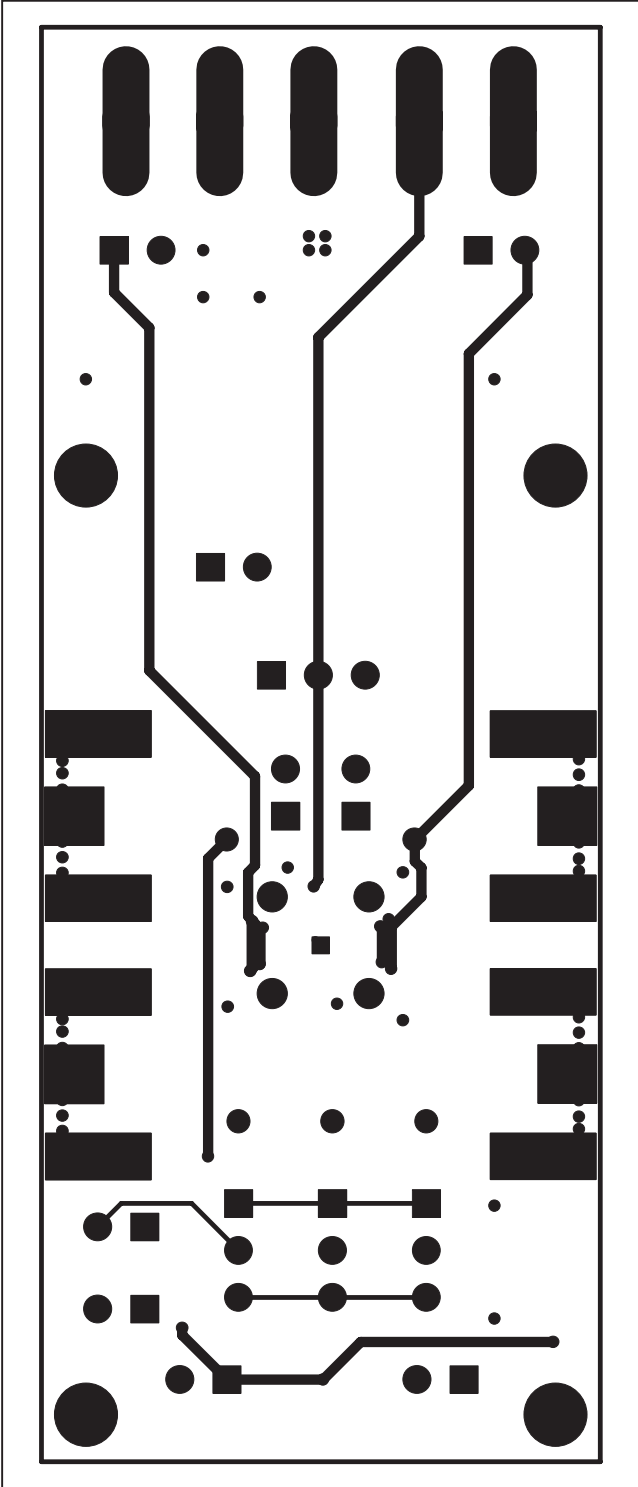


Figure 6. MAX3804 PCB Layout—Solder Side

MAX3804 Evaluation Kit

Revision History

REVISION NUMBER	REVISION DATE	DESCRIPTION	PAGES CHANGED
0	4/03	Initial release.	—
1	2/09	Changed the <i>Ordering Information</i> to include RoHS compliance.	1
		Updated the MAX3804 part number for U1 in the <i>Component List</i> .	1
		Replaced figures 2 to 6.	3, 4, 5

Maxim cannot assume responsibility for use of any circuitry other than circuitry entirely embodied in a Maxim product. No circuit patent licenses are implied. Maxim reserves the right to change the circuitry and specifications without notice at any time.

6 _____ **Maxim Integrated Products, 120 San Gabriel Drive, Sunnyvale, CA 94086 408-737-7600**